

Interactive TV



Chapter



Interacting with Your TV

What you'll find in this chapter:

- **DISHHOME**
- **CUSTOMER SERVICE**

DISHHOME INTERACTIVE TV

Press DISH on the remote control or go to channel 100 to view the DishHOME features available with your service. You can order channels, check the news and weather, and even play games. Make sure you connect an active phone line to your receiver. You can enjoy this feature on one TV at a time.



CUSTOMER SERVICE

An important feature of your satellite TV receiver is Customer Support. This menu provides convenient access to your DISH Network account to review your statement, pay your bill, upgrade programming, and more. Make sure you connect an active phone line to your receiver.

Press MENU and then select **Customer Support**.



TIPS

- Whenever you want to exit an interactive feature and return to watching programming, press VIEW LIVE TV and you'll be taken to the last channel you were watching.
- You can also get to Customer Support from DishHOME.