



Table of Contents

Important Safety Precautions v

1 Introduction

WELCOME	2
HOW TO USE THIS GUIDE	2
ABOUT YOUR DISH NETWORK ACCOUNT	4
WATCHING TV NOW	5
ADDITIONAL SERVICES	7
ABOUT SATELLITE TV RECEPTION	7
WHY CONNECT TO A PHONE LINE	8
MOVING ON-SCREEN LOGO	8

2 Receiver and Remote Controls

SATELLITE RECEIVER OVERVIEW	12
DUAL AND SINGLE MODES	12
REMOTE CONTROL	15
SATELLITE RECEIVER FRONT PANEL	21
SATELLITE RECEIVER BACK PANEL	21
USING THE MENUS	22
USING TEXT FIELDS	23

3 Finding Programs to Watch

CHANGING CHANNELS	28
USING THE PROGRAM GUIDE	28
USING THE BROWSE BANNER	30
USING THEMES AND SEARCH	31
USING PICTURE-IN-PICTURE	33

4 Pay Per Programs

PAY-PER-VIEW	36
DISH ON DEMAND	36

5 Favorites Lists

WHAT ARE FAVORITES LISTS?	40
CREATING OR CHANGING FAVORITES LISTS	41
NAMING FAVORITES LISTS	41
USING FAVORITES LISTS	41

6 Locks

WHAT ARE LOCKS?	44
CREATING OR CHANGING A PASSWORD	45
LOCKING AND UNLOCKING YOUR RECEIVER	45
CREATING OR CHANGING RATINGS LOCKS	46
CREATING OR CHANGING CHANNEL LOCKS	47
LOCKING OR UNLOCKING PAY-PER-VIEW CHANNELS	47
HIDING ADULT CONTENT OR LOCKED CHANNELS	48
LOCKING OR UNLOCKING THE FRONT PANEL	49

7 Interactive TV

DISHHOME INTERACTIVE TV	52
CUSTOMER SERVICE	52

8 Digital Video Recording

WHAT IS DVR?	54
PAUSING A PROGRAM	54
REVERSING, FAST FORWARDING, AND SKIPPING	55
SLOW MOTION AND FRAME-BY-FRAME	55
RECORDING A LIVE PROGRAM	56
PLAYING A RECORDED PROGRAM	56
USING RECORD PLUS	56
USING RECORD LINK	57
RECORDING WHILE WATCHING DIFFERENT PROGRAMS	57
RECORDING OPTIONS	60

9 Record Future Programs

TIMERS AND RECORDINGS	62
USING THE TIMERS LIST	65
USING THE DAILY SCHEDULE	65
SETTING UP AN AUTOMATIC TIMER	66
SETTING UP A MANUAL TIMER	67
SETTING UP A DISHPASS™ TIMER	68
DELETING A TIMER	69

10 Remote Control Setup

IMPROVING RECEIVER CONTROL	72
CONTROLLING OTHER COMPONENTS	75
THE RECOVER BUTTON	81
SENDING DISCRETE POWER ON AND OFF	83

11 Receiver Customization

USING SHARED VIEW	88
MODULATOR SETUP	88
USING MULTIMEDIA	89
USING CALLER ID	90
CHANGING LANGUAGES	91
USING CLOSED CAPTIONING	92
USING DOLBY® DIGITAL SURROUND SOUND	93
CHANGING THE PROGRAM GUIDE ORDER	94
CHANGING THE GUIDE DISPLAY	94
RESETTING TO FACTORY DEFAULTS	95
SCHEDULING RECEIVER UPDATES	96
INACTIVITY STANDBY	96

12 Connections and Setup

CONNECTING TO THE NEARBY TV (TV1)	100
CONNECTING TO THE REMOTE TVs (TV1 OR TV2)	103
CONNECTING TO YOUR DISH ANTENNA	107
CONNECTING THE PHONE LINE	108
CONNECTING A VCR TO THE REMOTE TV	109
CONNECTING AN OVER-THE-AIR ANTENNA	110
USING TROUBLESHOOTING TOOLS	116

Reference

TROUBLESHOOTING TABLES	120
REMOTE CONTROL DEVICE CODES	132

Appendix 135

Index 145



Safety


Important Safety Instructions

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with a dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Use only attachments/accessories specified by the manufacturer.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Note to Satellite TV System Installer: This reminder is provided to call the satellite TV system installer's attention to Article 820-40 of the National Electrical Code (NEC) that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

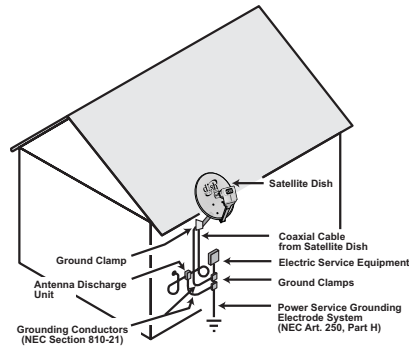

- Operate the receiver using only the type of power source indicated on the marking label. Unplug the receiver power cord by gripping the power plug, not the cord.
- Do not overload wall outlets or extension cords; this can result in a risk of fire or electrical shock.
- Never insert objects of any kind into the receiver through openings, as the objects may touch dangerous voltage points or short out parts. This could cause fire or electrical shock.
- Do not locate the antenna near overhead light or power circuits, or where it can fall into such power lines or circuits. When installing the antenna, take extreme care to avoid touching such power lines or circuits, as contact with them can be fatal.
- Do not attempt to service the receiver yourself, as opening or removing covers may expose you to dangerous voltage, and will void the Limited Warranty. Refer all servicing to authorized service personnel.

Proper Care of Your Equipment

- Always handle the satellite receiver carefully. Excessive shock and vibration can damage the hard drive.
- Unplug the receiver from the AC power outlet before cleaning.
- Always turn the receiver off, unplug it and let it sit for at least 30 seconds before moving it.
- The use of accessories or attachments not recommended by the receiver manufacturer will void the Limited Warranty.
- Do not place the receiver in an enclosure (such as a cabinet) without proper ventilation.
- Do not stack the receiver on top of or below other electronic devices as this can cause heat build-up and vibration.
- Do not install the receiver in any area where the temperature can be less than 40°F or more than 113°F. If the receiver is cold to the touch, do not plug it in immediately. Let it sit unplugged at room temperature for at least 45 minutes before plugging it in.
- Use an outlet that contains surge suppression or ground fault protection. During an electrical storm or when the receiver is left unattended and unused for long periods of time, unplug the power cord from the wall outlet, disconnect the lines between the receiver and the antenna, and disconnect the telephone line. This will provide additional protection against damage caused by lightning or power line surges.



On some TVs, the presence of fixed images for extended periods of time may cause them to be permanently imprinted on the screen. Consult your TV user guide for information on whether this is a problem for your TV, what operating/viewing restrictions apply to avoid this problem, and associated TV warranty coverage.